



OPERATION MANUAL

PASSIVE---To connect guitar with low-level output

ACTIVE---To connect guitar with high-level output

GAIN--- Select between DRIVE and CLEAN

SELECT--- To adjust the preamplifier effect level for gain channel

TREBLE--- Controls the boost and cut of the upper frequencies range

MID--- Controls the boost and cut of the middle frequencies range

BASS--- Controls the boost and cut of the low frequency range

Delay---Turn the knob to change the time and amount of delay effects.

REVERB---Turn the knob to adjust the reverb level.

VOLUME--- Adjusts the overall level or volume of the amplifier

MIC--To connect MIC

VOL--Adjusts the MIC of the volume

LINEOUT--- Jack for connection to mixer or sound card or recording equipment

PHONE--- For connecting headphones with a 6.5mm stereo plug.

When using the headphone jack, the speaker is disconnected

POWER---Turns amplifier ON &OFF

SPECIFICATION

OUTPUT POWER	40 Watts
AC POWER	220V 50HZ
SNR	frequency 70 db
SPEAKER	8"
OUTPUT IMPEDANCE	4 ohms